PYLE®

PyleAudio.com

718.535.1800 718.236.2400(fax)
1600 63rd Street, Brooklyn NY 11204

PYLE®

PWMAB250

OPPERATING INSTRUCTIONS

300Watts Bluetooth Boom Rock Portable PA 6.5" Speaker System w/USB/SD/FM Radio,Rechargeable Battery, Remote and One Wired Microphone

BOOMROCK

User's manual

Panel design

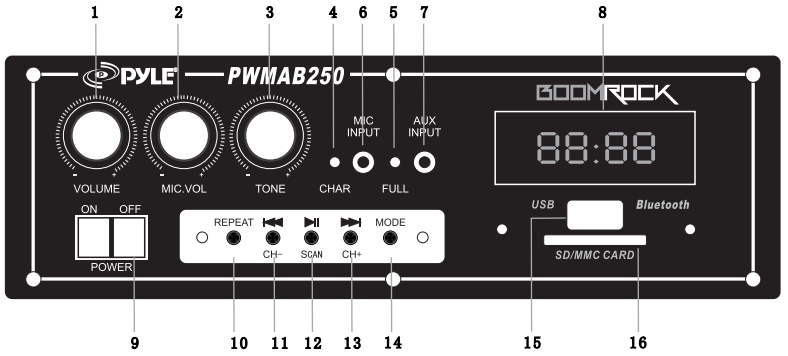

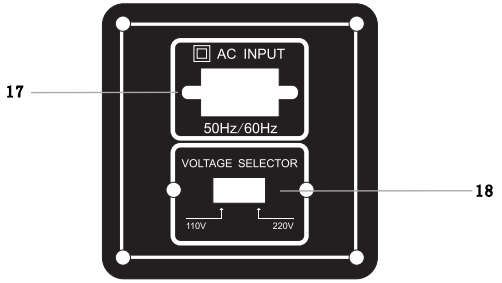

1.Master volume controller
2.Mic volume controller
3.Tone controller
4.Charging indicator lights
5.Full indicator lights
6.MIC input slot
7.Aux input
8.Display screen
9.Power ON/OFF switch
10.Repeat function
11.Previous song selector
Previous radio station
12.Play for Mp3 or other audio sources
Auto scan for radio stations
13.Next song selector
Next radio station
14.Input selectors
15.USB input for Mp3 player
16.SD/MMC card input for Mp3 player
17.Ac input
18.110/220 Voltage Selector

Remote control

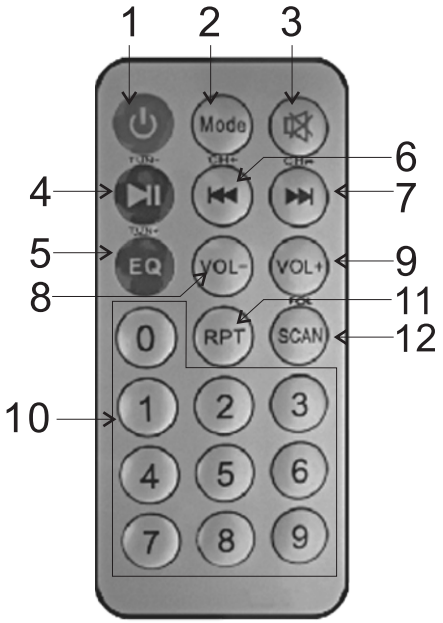

1.Power:on/off
2.Mode:USB/SD/FM/Aux input
3.Mute
4.Play/Pause
Previous radio station
5.EQ:equalizer
Next radio station
6.Previous:previous station/previous song
7.Next:next song/next station
8.Volume: increase
9.Volume reduce
10.0-9 USB/SD or preset radio statons selector
11.Repeat For Usb/sd
12.Auto Scan For Radio Stations

Instructions

Turning ON/OFF

The PA speaker can be powered when connected to main power or using the internal 12V battery.

1.Connect the power cable to the top of the unit.

2.Connect the other end of power cable to main power.

3.Turn on the switch for the main power.

4.The unit will automatically power on when connected to main power.

Notes: If you wish to use the internal battery to power the unit, just simply turn on the Battery switch located on the top of unit to ON.

Charging

Before using the PA speaker for the first time, charge the unit at least 8 hours.

1.Connect the power cable to the top of the panel.

2.Turn off the battery switch on the top of the panel.

3.Recharge indicator light will light when unit is charging.

Notes: The internal battery will charge while the unit is being operated and the power switch is on. It is better to charge the unit while the power switch is off.

Instructions

Using the Wired Microphone

You can connect the wired microphone to this unit using the MIC INPUT located on the top of control panel.

1.Turn off the unit.

2.Connect your wired microphone to the MIC INPUT located on top of the control panel.

3.Adjust the microphone volume by tuning the MIC VOL/ECHO knobs located on top control panel.

NOTES: You can use the wired microphone and wireless microphone at the same time.

Connecting a Guitar

You can connect your Guitar to unit using the 1/4” GUITAR INPUT plug.

1.Turn on the unit.

2.Connect your guitar cable to GUITAR INPUT port on top control panel.

3.Adjust the volume by turning the GIUTAR VOL on top control panel.

Instructions

USB/SD Card Playback

You can play music from USB stick or SD Card using the USB/SD slot on the PA speaker.

1.Turn on the unit.

2. Insert your USB or SD card into the slot.

3. Once inserted the USB or SD card unit will begin automatic play.

4. You can use the PRE/NEXT/PLAY/PAUSE to control and play music.

NOTES:The speaker system can play the following audio file formats:MP3,MP4,WMA.The USB/SD Card no more than 32GB.

Operation may be slower when searching large memory files

It will need several seconds to respond when your USB/SD Card is full of contents.

BLUETOOTH playback

You can connect your Bluetooth phone or other devices to the PA speaker.

1.Turn on the unit.
2.Press the INPUT button which located on top control panel, near the USB/SD slot.
3.The Bluetooth is active when you hear two “tone” indicator sound.
4.Use your Bluetooth phone or other devices to search for the PA speaker. It will be displayed as PWMAB250.
5.Connect your device by selecting PWMAB250, it will require a four digit code, the code is 0000.
6.Enter the code and connect with unit.
7.Play music on your phone or device, sound will come from the speaker through the BLUETOOTH wireless connection.
8.You can use the VOLUME/BASS/TREBLE to adjust the sound level for BLUETOOTH, also you can adjust the Bluetooth music sound through your own phone or other device.
NOTES: If there is no sound through the PA speaker during Bluetooth, Check the volume controller both on the unit and on your phone or other device.

Using the Radio

1.Turn on the unit.
2.Press INPUT once, to select FM Radio.
3.Press PRE/NEXT to select your desired radio station.
Ensure that you have the extended the antenna located on the rear of the speaker. It will ensure the best possible radio quality and signal strength.
4.When you first use the radio, press NEXT button twice, it will auto search and store the radio stations with the strongest signal.

Instructions

Use of the External Battery Option

To use the PA speaker longer than the internal battery life, you can connect the PA speaker to a external 12V Battery Source.
1.Find the INPUT DC 12V on the top control panel.
2.Use the correct cable connect the INPUT DC 12V.
NOTES: The PA speaker will consume the internal battery first, when it is low, the LOW BATTERY indicator light located on the control panel will turn on, you can use the external 12V battery to power on the unit. The external 12V battery will also charge the internal battery while in use.

PYLE®

PyleAudio
1600 63rd St
Brooklyn, NY
11204
www.pyleaudio.com